

Measuring Cylinder for checking Eye Wash Stations

Fast and Easy testing:

The BROEN-LAB measuring cylinder helps to speed up and simplify manual monthly performance checks for emergency eye washes. It enables users to check the volume flow, jet height and water quality in a quick and hygienic manner.

Its robust design means that the measuring cylinder will not spill a drop of liquid.

Its measurement markings for volume and jet height make it ideal for carrying out checks in compliance with the requirements of EN 15154-2 and ANSI 358.1.

A single device for a range of different checks:

- Volume flow measurement
- Visual check of spray patterns
- Visual check of water quality


Key benefits:

- Quick
- Clean
- Versatile
- Flexible
- Compact
- Durable



Additional testing equipment

Combining the cylinder with the BROEN-LAB Trolley, item number 17 851.92, ensures that any tested water can be disposed of easily.

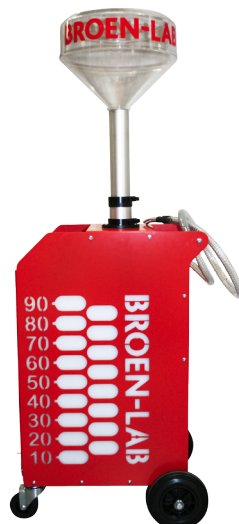

Measuring Cylinder for checking Eye Wash Stations

Details:

- Transparent cylinder. Circumference: 250 mm, Height: 349 mm
- 6 l and 12 l markings for standard volumes
- 10 cm and 30 cm markings for standard jet heights

Material:

- Strong acrylic cylinder
- Sturdy black plastic handle

Weight:

- Approx. 1.6 kg when empty

Item number:

- 27 99 008 10 01

