


Emergency Safety Showers

ANSI Z358.1-2014

SPRAY PATTERN AND WATER DISTRIBUTION

The diameter of the water spray pattern must be minimum 50.8 cm (20 in.) measured at 152.4 cm (60 in.) above the floor.

The eye/face showers flushing fluid flow pattern must be located within a range of 83.8 cm (33 in.) to 134.6 cm (53 in.) above the floor and minimum 15.3 cm (6 in.) from the wall or nearest obstruction.

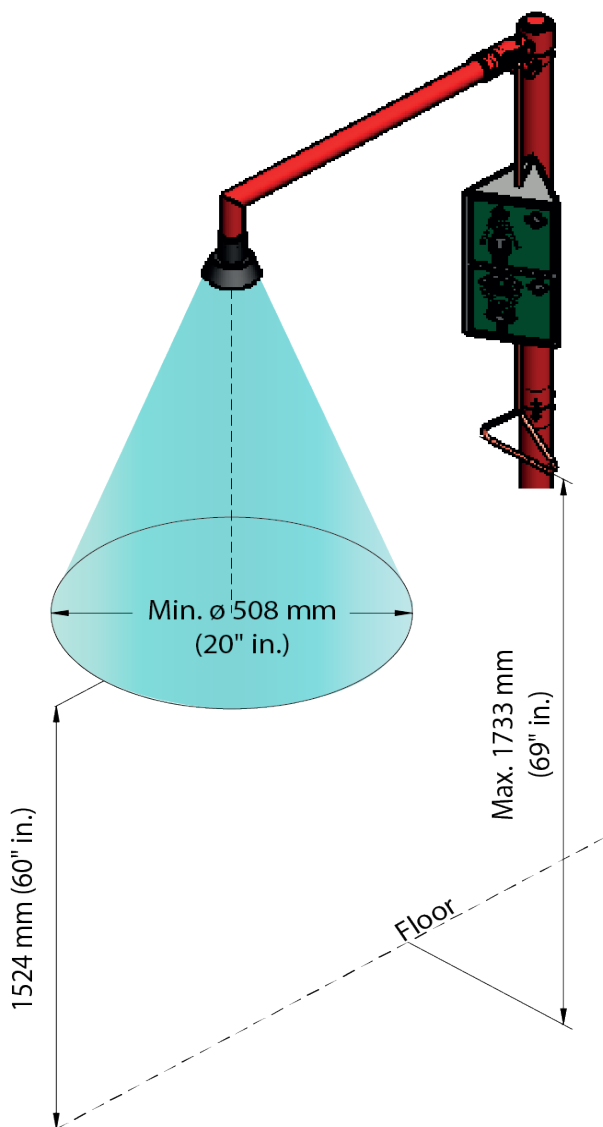

OPERATION

The valve shall be simple to operate and go from "off" to "on" in 1 second or less.

The valve shall remain open without the use of the operator's hands until intentionally closed.

The handle of pull rod must be located at a maximum height of 173.3 cm (69 in.) above the floor.

MAINTENANCE

The shower must be activated at least once a week.

BROEN-LAB A/S

Drejervaenget 2, 5610 Assens, Denmark
www.broen-lab.com

BROEN-LAB